










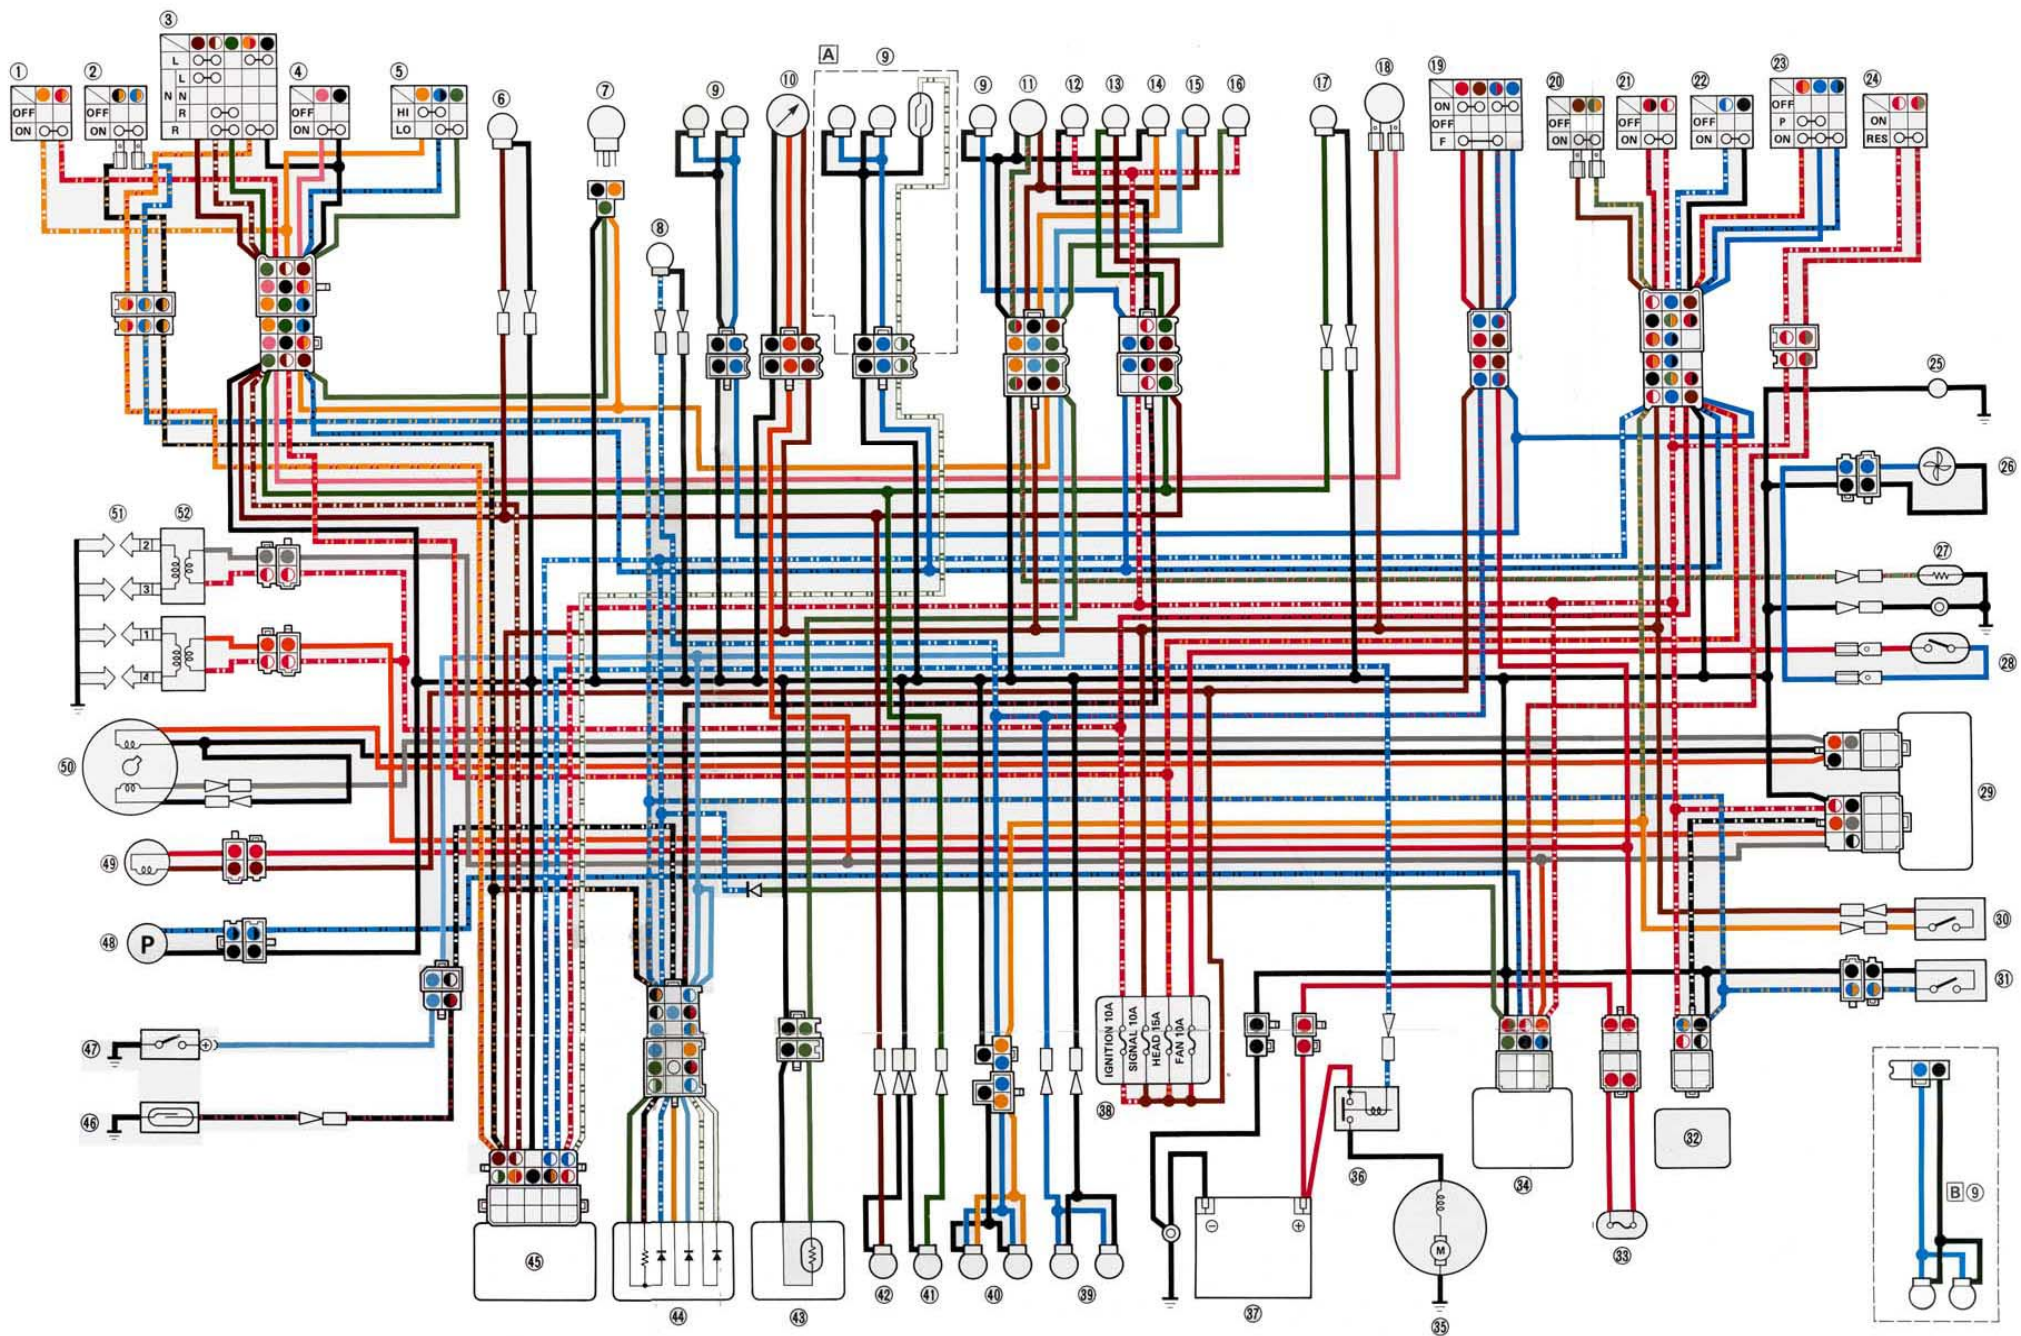






















**FZX 750 WIRING DIAGRAM**





# COLOR CODE CODE DE COULEUR FARBENKODIERUNG

|   |   |   |  |
|---|---|---|--|
|  Black<br>Noir<br>Schwarz              |  Dark Green<br>Vert Foncé<br>Dunkelgrün    |  Red/Yellow<br>Rouge/Jaune<br>Rot/Gelb   |  Black/Red<br>Noir/Rouge<br>Schwarz/Rot     |
|  Red<br>Rouge<br>Rot                   |  Gray<br>Gris<br>Grau                      |  Red/Green<br>Rouge/Vert<br>Rot/Grün     |  Black/Yellow<br>Noir/Jaune<br>Schwarz/Gelb |
|  Green<br>Vert<br>Grün                 |  Brown<br>Brun<br>Braun                    |  Red/Black<br>Rouge/Noir<br>Rot/Schwarz  |  Black/White<br>Noir/Blanc<br>Schwarz/Weiß  |
|  Blue<br>Bleu<br>Blau                  |  Chocolate<br>Chocolat<br>Schokoladenfarbe |  Blue/White<br>Bleu/Blanc<br>Blau/Weiß   |  Brown/White<br>Brun/Blanc<br>Braun/Weiß    |
|  Yellow<br>Jaune<br>Gelb               |  Orange<br>Orange<br>Orange                |  Blue/Black<br>Bleu/Noir<br>Blau/Schwarz |  Green/Red<br>Vert/Rouge<br>Grün/Rot        |
|  Pink<br>Rose<br>Rosa                  |  Sky Blue<br>Bleu Ciel<br>Himmelblau       |  Blue/Red<br>Bleu/Rouge<br>Blau/Rot      |  Green/Yellow<br>Vert/Jaune<br>Grün/Gelb    |
|  Yellow/Red<br>Jaune/Rouge<br>Gelb/Rot |  Red/White<br>Rouge/Blanc<br>Rot/Weiß      |  Blue/Yellow<br>Bleu/Jaune<br>Blau/Gelb  |  White/Green<br>Blanc/Vert<br>Weiß/Grün     |
|  White<br>Blanc<br>Weiß                |   |   |  |

- |                               |                           |
|-------------------------------|---------------------------|
| ① "PASS" switch               | ②⑦ Thermo unit            |
| ② Clutch switch               | ②⑧ Thermo switch          |
| ③ "TURN" switch               | ②⑨ Ignitor                |
| ④ "HORN" switch               | ③⑩ Rear brake switch      |
| ⑤ "LIGHTS" (Dimmer) switch    | ③⑪ Sidestand switch       |
| ⑥ Front flasher light (L)     | ③⑫ Sidestand relay        |
| ⑦ Headlight                   | ③⑬ Fuse (Main)            |
| ⑧ Marker light                | ③⑭ Pump relay             |
| ⑨ Meter light                 | ③⑮ Starter motor          |
| ⑩ Tachometer                  | ③⑯ Starter relay          |
| ⑪ Temp meter                  | ③⑰ Battery                |
| ⑫ "OIL LEVEL" indicator light | ③⑱ Fuse box               |
| ⑬ "TURN" indicator light      | ③⑲ License light          |
| ⑭ "HIGH BEAM" indicator light | ④① Tail/brake light       |
| ⑮ "NEUTRAL" indicator light   | ④② Rear flasher light (R) |
| ⑯ "FUEL" warning light        | ④③ Rear flasher light (L) |
| ⑰ Front flasher light (R)     | ④④ Fuel sender            |
| ⑱ Horn                        | ④⑤ Diode                  |
| ⑲ Main switch                 | ④⑥ Relay assembly         |
| ⑲ Front brake switch          | ④⑦ Oil level switch       |
| ⑲ "ENGINE STOP" switch        | ④⑧ Neutral switch         |
| ⑲ "START" switch              | ④⑨ Fuel pump              |
| ⑲ "LIGHTS" switch             | ④⑩ AC generator           |
| ⑲ "FUEL" (Reserve switch)     | ④⑪ Pick up coil           |
| ⑲ Body earth                  | ④⑫ Spark plug             |
| ⑲ Fan                         | ④⑬ Ignition coil          |
|                               | ④⑭ Except for Germany     |
|                               | ④⑮ For Germany            |

# 1986 FZX700S/FZX700SC AND 1987 FZX700T/FZX700TC

